## Splash<sub>2</sub>o Aqua-Tower Lower Arm Section Replacement Instructions

#### PRFPARATION:

- Disconnect unit from water supply and drain reservoir
- Remove all Aqua-Stations
- Get a Philips head screwdriver

#### 1. Remove arm from base

- a) Start with the Aqua-Tower in the collapsed, storage position
- Carefully lower and rest the unit on its side with the arm to be replaced on the top side
- c) Disconnect the arm hose by loosening the threaded white connector.
- d) Move the hose out of the way and remove hinge locking pins by pinching them together and pulling them out.
- e) Remove arm off its pivot on the base by just firmly pulling on it. It should pop off.

# 2. Disconnect valve and connector from the arm

- a) Using the Phillips screwdriver, unscrew the blue valve on the arm; set it aside for reassembly later.
- b) Turn arm upside down, pull firmly on the green connector at the end of the arm to pop it out, and remove the tubing assembly

### 3. Replace and reconnect arm

- Separate lower arm and extension sections by lifting the locking tab, squeezing both tabs on the sides, and pulling the sections apart.
- Align and push the new arm section to connect with extension section until it clicks fully into position. Push locking tab back in until it is flush with top surface.
- c) Re-assemble arm to base by reversing steps above. Remember to re-connect the green connector and blue valve first.

